

# PMD75M

Digital Dual-Optic Detector with Pet Immunity



## INSTALLATION MANUAL

FW Version: V1.01.000

### Introduction

The PMD75M is a wireless, digital, dual-optic Passive Infrared (PIR) motion detector. It is immune to pets weighing up to 40 Kg (90 lbs).

The detector communicates with Paradox M systems using 2-way wireless communication and incorporates the latest Gaussian Frequency Shift Keying (GFSK) technology with frequency and encryption hopping. These features ensure superior wireless range, enhanced encryption for security, reliable communication, and extended battery life.



**NOTE:** *The PMD75M is designed to work only with AA Lithium. Using alkaline batteries will shorten the life of the detector by 50%.*

### Quick Installation - Experienced Installers

To install PMD75M:

1. Open the detector, and remove the battery holder and PCB.
2. Fix the backplate.
3. Insert the battery holder and the PCB. Close the detector.
4. Perform a walk test.
5. Pair PMD75M with the console (Using the BlueEye application):
  - Go to: **Hardware** > Tap **Add Devices** > **Wireless Devices Auto learn**.  
**NOTE:** *You can instantly pair PMD75M by pressing the Learn button, or by opening the tamper or a zone.*
6. Configure PMD75M (Using the BlueEye application):
  - Go to: **Hardware** > Tap **PMD75M** from the device list > Enter the necessary details > **Save**.

Built-in status indications of PMD75M:


- Red Blinking 3 times - Not connected to the console; the device is defaulted (new or unpaired).

- Red (3 seconds) - Not connected to the console; but the device is paired.
- Green (3 seconds) - Detection and transmission occurred (maximum twice within 3 minutes)
- Green Blinking - Two detections within 3 minutes and goes to **cool-down** mode.
- Red/Green - After tamper is detected, the device blinks red and green alternately for 3 seconds. After the tamper is resolved and the device is closed, the device blinks green for 3 seconds.
- Green Blinking (30 seconds) - PIR stabilization is in progress (after power-up).

**NOTE:** The low battery voltage threshold of the PMD75M is 3.6V, and the battery is considered restored at 4.1V (on power-up only).


## Components of PMD75M

The following figure displays the components of PMD75M.

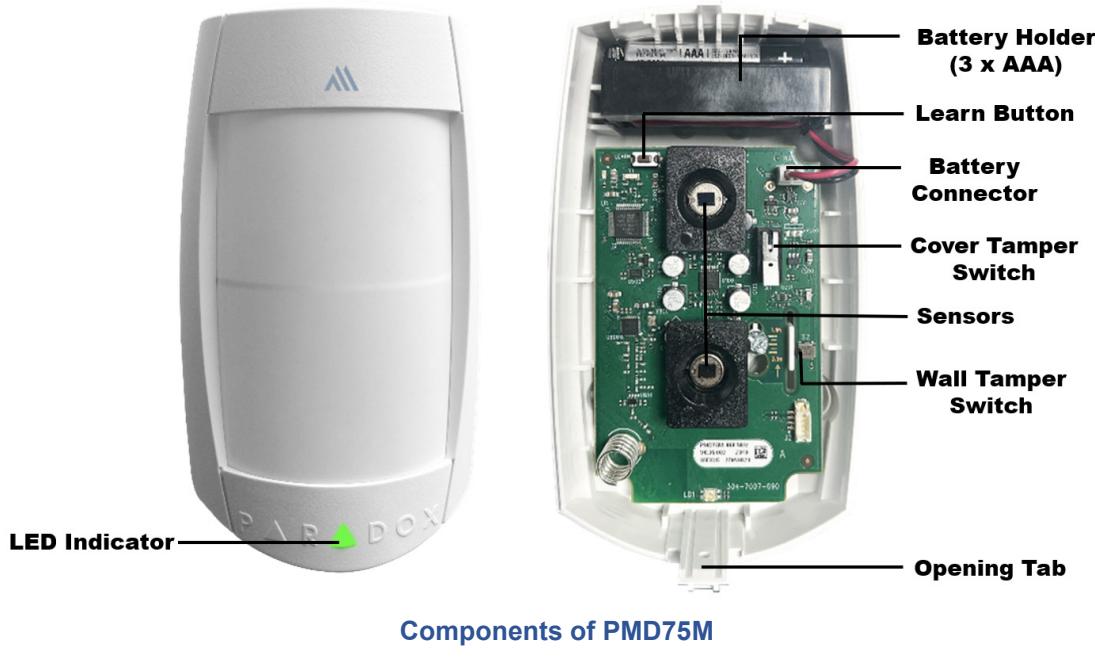


## Detection Field

The detector must be installed at a height of 2.1 meters (6.9 feet) above the floor level. The horizontal coverage angle of PMD75M is 90°. It provides effective detection across a range from 1.5 meters (5 feet) to 15 meters (49.2 feet).

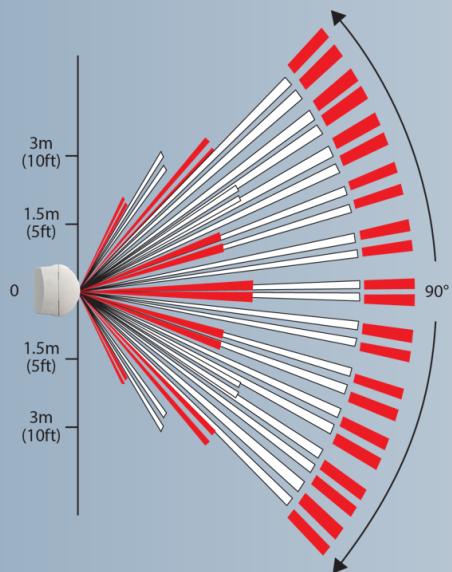

Beam Pattern – Top View

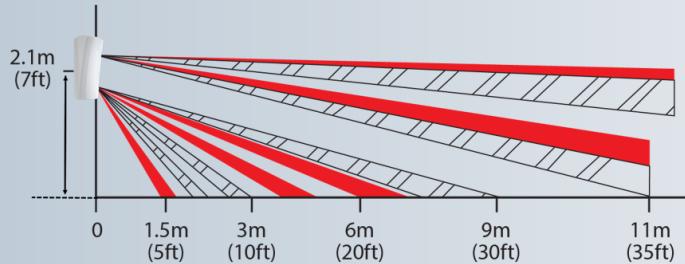

Beam Pattern – Side View

**NOTE:** Mounting the detector at a lower height may reduce its detection range while mounting it higher could reduce the performance of the lower detection beams.

## Pet Immunity

The PMD75M detector offers pet immunity for animals weighing up to 40 Kg (90 lbs). When an animal of this size moves close to the ground, it cannot cross enough beams at once to trigger an alarm. This minimizes false alarms caused by pets while maintaining accurate detection of human intrusions.

## Physical Mounting

### CAUTION:


- Ensure that there are no obstacles, such as furniture or doors that may block its detection field.
- Avoid placing the detector near heat sources, air conditioners, or in direct sunlight to minimize false alarms.

To mount the PMD75M motion detector:

1. Insert a flathead screwdriver into the opening tab at the bottom of the PMD75M motion detector and lift to remove the front cover.
2. Remove the battery holder from the backplate.
3. Release the screw from the device board and remove the board.
4. Fix the backplate on the wall.

**CAUTION:** Do not touch the sensors on the device board, as this may lead to malfunction. If contact occurs, clean the surface of the sensors using a soft cloth moistened with pure alcohol.

**NOTE:** As per the EN security standards, one screw must be secured in the tamper hole. The use of double-sided tape does not trigger a wall tamper alarm.

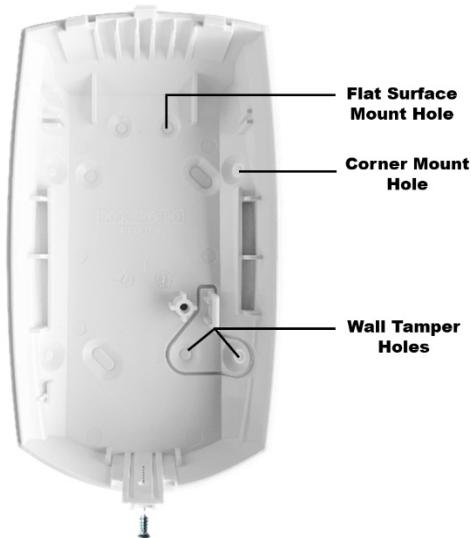

5. Reattach the device board to the backplate and tighten the screw.
6. Insert the battery holder into the backplate.
7. Connect the battery connector.


The PMD75M is powered on. After the PMD75M detector is powered on, it enters a walk-test mode for 15 minutes. For more information, see the [Walk Test](#) section in this manual.

8. Reattach the front cover and tighten it using the screw at the bottom.


### PCB Height Adjustment

The PMD75M is designed for optimal performance at a height of 2.1m (7 ft), but can be installed at a lower or higher height. After installing the detector, adjust the device board height accordingly. For example, if the detector is installed at a height of 2.1m (7 ft), the device board should then be adjusted to 2.1m (7 ft). To adjust the device board height, loosen the device board screw, slide the board up or down, and align the desired markings with the white tab.

**NOTE:** Any device board adjustments should be followed by a walk test.

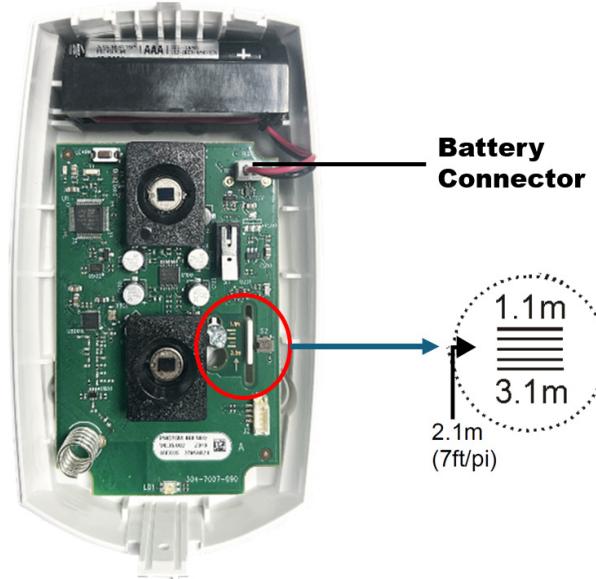

See the following figure for the beam dispersion at different height adjustments of the device board.

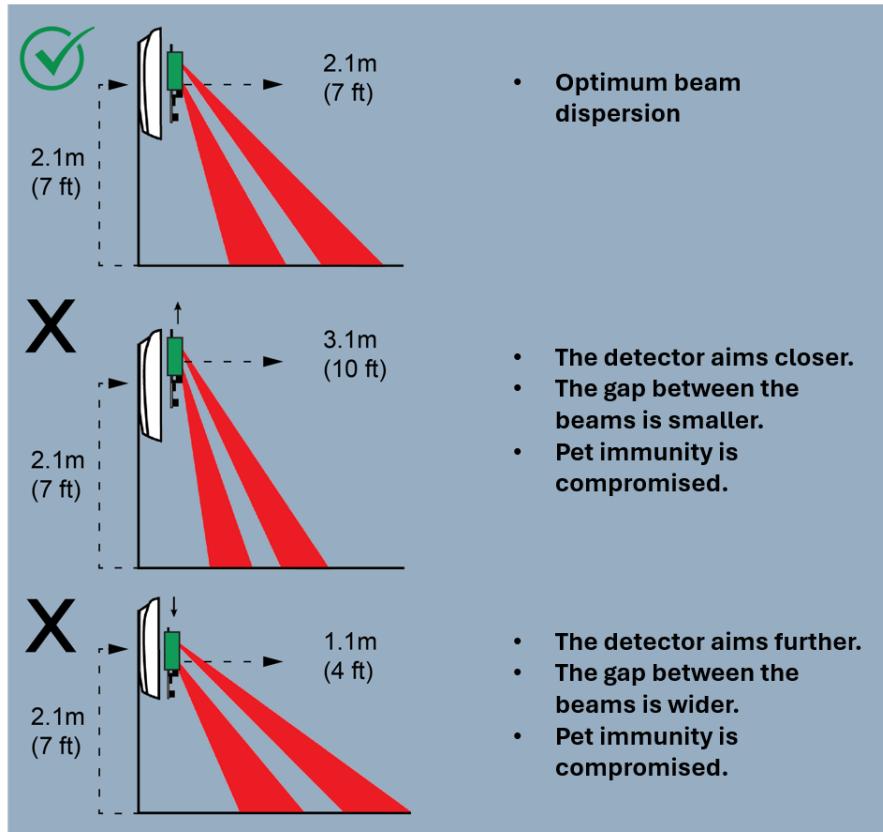

### Device Board Height Adjustments

## Power-up Sequence

During the power-up sequence, the LED will flash five times red if the device is not paired to the console or five times green if paired to the console. The PMD75M waits between 0-10 seconds before connecting/pairing with the console. If the cover of the device is open, green and red LEDs will flash quickly.

## Pairing PMD75M

The pairing and configuration settings of PMD75M are managed through the BlueEye application.

### Prerequisites


Ensure that:

1. The PMD75M is within the range of the console.
2. The BlueEye application is installed on your mobile and connected to the site.
3. The M console is powered on (Paradox logo color - white, red, or green).

## Pairing PMD75M

To pair the PMD75M with the wireless console by an installer:

1. In BlueEye > the **Hardware** tab, tap **Add Devices**, and then tap **Wireless Devices Auto learn**. The wireless console searches for new devices and a rotating radar icon is displayed. All unpaired devices pair within 6 minutes and appear at the top of the device list with a **new** tag and voice announcements. You can open the front cover of the detector and press the **Learn** button momentarily, or open the tamper or a zone for immediate pairing.

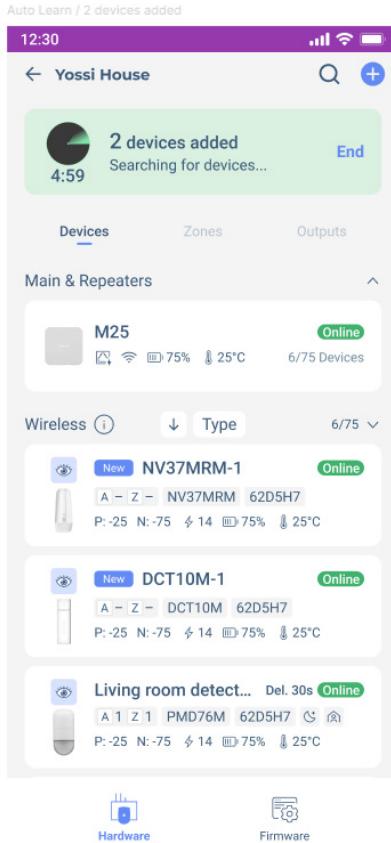

To identify the device that you want to pair, you can either open or close the zone, or trigger the device tamper, and then check the device's screen in the BlueEye application to see the corresponding display. When you open or close the zone, an eye icon displayed beside the device name shows opening and closing. When you trigger the device tamper, a **T** symbol appears on the device name in the BlueEye application.

## Pairing Previously Used Devices

You can pair used devices under the following conditions:


- **When the previously used device is not online with another wireless console:** Start auto-learn. Open the device or press the **Learn** button momentarily for immediate pairing, or wait up to 6 minutes for automatic pairing.
- **When the previously used device is online with another wireless console:** Press and hold the **Learn** button for 8 seconds to reset the device to its default settings. Reset is indicated by the LED flashing red three times. Once the reset is complete, initiate auto-learn.

**NOTE:** *Ensure the device is not connected or paired with the previous console before resetting the device.*

## Configuring PMD75M

To configure the PMD75M settings:

1. When in the **Hardware** tab, tap **PMD75M** from the device list if the device is already paired.
2. On the page that opens, enter the necessary details for the parameters and then tap **Save**. For details about each parameter displayed on the page, see [Table 1](#).

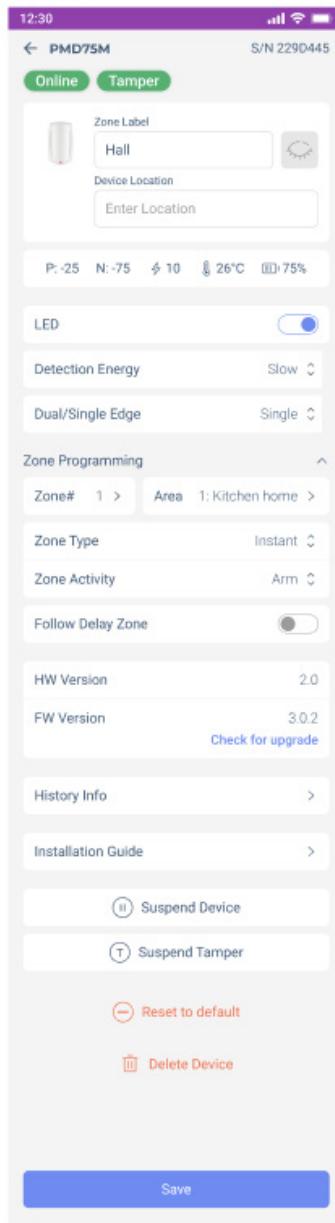

The following table lists the parameters displayed for configuring the PMD75M, along with their descriptions.

**Table 1**

| Parameter               | Description   |
|-------------------------|---|
| <b>Zone Label</b>       | Enter a name for the zone.  |
| <b>LED</b>              | Determines whether the LED indications for the device are enabled or disabled.  |
| <b>Detection Energy</b> | Adjust the energy level required to trigger an alarm. <ul style="list-style-type: none"> <li>• <b>Slow</b> is the standard setting for normal detection.</li> <li>• <b>Fast</b> (Default)– You can use this option if there is a risk of false alarms due to factors such as strong sunlight reflections, air conditioning drafts, or moving curtains.</li> </ul> |
| <b>Dual/Single Edge</b> | This setting determines the Digital Signal Processing (DSP) operational mode of the detector.   |

|                         |   |
|-------------------------|---|
|                         | <ul style="list-style-type: none"> <li>• <b>Single:</b> Best for normal environments with little interference.</li> <li>• <b>Dual</b> (default): Offers better protection against false alarms, especially when the detector is near sources of interference.</li> </ul>  |
| Zone Programming        | <b>Zone# and Area</b>   |
|                         | <b>Type/Activity</b><br>Select the type of zone.<br>The following are the different zone types: <ul style="list-style-type: none"> <li>• Arm</li> <li>• Arm/Sleep</li> <li>• Arm/Stay</li> <li>• Arm/Sleep/Stay</li> <li>• <b>24 hours</b> – Always armed. The system remains in alarm as long as this zone is open. The system can be armed even if the 24-hour zone is in alarm.</li> </ul>   |
|                         | <b>Follow Delay Zone</b>  |
|                         | This zone is instant and becomes a delay zone if a delay zone is opened first.  |
|                         | <b>Entry Delay</b><br>When this option is enabled, opening a zone triggers an entry delay in any arming mode. <ul style="list-style-type: none"> <li>• <b>Instant</b> – When in any armed status, an immediate alarm occurs. However, a delay period can be added to the <b>Instant</b> zone when arming in the Stay and Sleep modes.</li> <li>• 5 sec</li> <li>• 10 sec</li> <li>• 15 sec</li> <li>• 30 sec</li> <li>• 45 sec</li> <li>• 1 minute</li> <li>• 1.5 minute</li> </ul> You can select the delay duration from the available options.   |
|                         | <b>Intellizone</b><br>When the <b>Intellizone</b> option is enabled for a device, the system will trigger an alarm under one of the following conditions, within the configured Intellizone Timer window (default: 30 seconds): <ul style="list-style-type: none"> <li>• <b>Two separate openings</b> are detected within the timer period.</li> <li>• A <b>trigger from an Intellizone</b>, followed by a <b>trigger from any other zone</b> within the timer period.</li> <li>• The <b>same zone remains open</b> throughout the timer period.</li> </ul> Intellizone is not available for any 24H zones. |
| <b>About</b>            | This tab displays details such as the installation date, production date, last programming date, battery replacements, battery history, and upgrade history.  |
| <b>Suspend Device</b>   | Disables monitoring of the device in the system.  |
| <b>Suspend Tamper</b>   | Disables tamper monitoring for the device.  |
| <b>Reset to Default</b> | This will reset the device to the factory default settings.<br><b>NOTE:</b> Only an installer can reset the device.   |
| <b>Delete Device</b>    | This option deletes the device from the system completely. After deletion, the system generates a push notification only if the owner registration is complete, not during installation.<br><b>NOTE:</b> Only an installer can delete the device.   |

## LED Indications

After configuring PMD75M, the detector displays various LED indications based on specific events. The following table lists the LED indications and their corresponding event.

**Table 2**

| LED Indication                     | Event  |
|------------------------------------|--|
| <b>Red Blinking 3 times</b>        | Not connected to the console; the device is defaulted (new or unpaired).   |
| <b>Red (3 seconds)</b>             | Not connected to the console; but the device is paired.  |
| <b>Green (3 seconds)</b>           | Detection and transmission occurred (maximum twice within 3 minutes)   |
| <b>Green Blinking</b>              | Two detections within 3 minutes and goes to <b>cool-down</b> mode.   |
| <b>Red/Green</b>                   | After tamper is detected, the device blinks red and green alternately for 3 seconds. After the tamper is resolved and the device is closed, the device blinks green for 3 seconds. |
| <b>Green Blinking (30 seconds)</b> | PIR stabilization is in progress (after power-up).   |

## Resetting

Press and hold the **Learn** button for 8 seconds to reset the device to its default settings. Reset is indicated by LED flashing red three times.

## Upgrading Firmware

To upgrade the firmware:

1. In the **Hardware** tab, tap on the device > **Check for Upgrade**.
2. If an upgrade is available, tap **Upgrade** when prompted.

The process may take a few minutes. Keep track of the progress in the BlueEye application to ensure that the upgrade is completed successfully. Both the Installers and owners can perform the upgrade.


**IMPORTANT:** The firmware upgrade can be done only when the system is disarmed.

## Signal Strength and Transmit Power Monitoring

The BlueEye application provides insights into each device's received signal strength and transmission power to optimize performance.

To view the RSSI and transmit power range:

1. When in the **Hardware** tab, tap the  icon next to the **Wireless** tab. A pop-up window with the RSSI and transmit power range is displayed.
2. Maximum power transmitted by PMD75M:
  - 868 MHz: +14 dBm
  - 914 MHz: +22 dBm

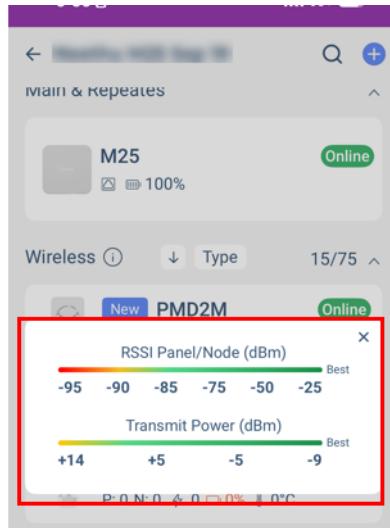

Tap on any listed device to view signal strength and additional device metrics. The following parameters are displayed for each device:



- **P** - Received signal strength at the panel
- **N** - Received signal strength at the device
- - Transmit power of the device.
- - Current temperature reading of the device.
- - Battery level of the device

A higher P and N value indicates stronger and clearer communication between the console and the device.

- If **P** is low, the console struggles to receive signals from the device.
- If **N** is low, the device struggles to receive signals from the console.

**NOTE:** Values below -93 with maximum Tx power are not recommended values, and RPT5M can be used to extend the range.

Power transmission impacts only **P**:

- When **power transmission** increases, the **P** value at the console generally improves, as a stronger signal is sent.
- If **P** value is good, the device can reduce its transmission power to save battery life.

**IMPORTANT:** All nodes adjust their transmission power to save battery life. The adjustment depends on the surrounding noise level and is updated at intervals set by the supervision timer or during a node status update.

## Walk Test

After powering on the detector or opening/closing the cover (if already powered on), the detector enters a walk-test mode for 15 minutes. Perform the following walk test to ensure the motion detector detects movement in the intended area.

### Steps:

1. Walk across the detection field, moving in and out of the detector's range.
2. Observe LED Indications.
3. If the motion detector doesn't pick up movement as expected, adjust its height or location and re-test.

With **Sensitivity** set to **High**, and **Detection Energy** set to **Fast**, crossing two beams is detected as a movement. With the **Sensitivity** set to **Low**, the amount of movement required for detection is doubled. The detector exits the walk-test mode after 15 minutes. To reactivate it, open the cover of the device to trigger the tamper switch, and then close the cover.

## Cool-Down Mode

The PMD75M motion detector indicates detection with a 3-second green LED display (or 3-second red if the detector is not paired or connected to the console). After two detections within 3 minutes, the PMD75M enters a **cool-down** mode to conserve battery life. The cool-down time is 3 minutes. During this period, it is indicated by a green blink (or red if not paired), but this signal will not be transmitted to the console. The detector exits the **cool-down** mode after 3 minutes.

## Dual Tamper Protection

The PMD75M motion detector is equipped with dual tamper protection (wall and cover). If the system is armed, any tamper activation immediately triggers a system alarm. When the system is disarmed, a tamper activation generates a report to the CMS, sends a push notification, and displays a tamper trouble alert in the BlueEye application.

## Technical Specifications

The following table lists the technical specifications of PMD75M along with their descriptions.

**NOTE:** *The specifications are subject to change without prior notice.*

**Table 3**

| Specification                   | Description   |
|---------------------------------|---|
| <b>Wireless Type</b>            | GFSK two-way with frequency and encryption hopping  |
| <b>Sensor Type</b>              | Two dual-opposed infrared sensors   |
| <b>Coverage</b>                 | 90° - 11m (36 ft) x 11m (36 ft); Center beams: 15m (49.2 ft)  |
| <b>Detection Speed</b>          | 0.2m to 3.5 m/s (0.6 ft to 11.5 ft/s)   |
| <b>RF Frequency</b>             | 868 (865.05 - 867.95) MHz or 914 (902.25 - 927.55) MHz<br>May vary by region.   |
| <b>RF Power</b>                 | 868 MHz up to +14 dBm radiated, 914 MHz up to +22 dBm in permitted countries.   |
| <b>Transmission Time</b>        | Less than 20 ms   |
| <b>Supervision Time</b>         | 20 minutes, 10 minutes (Default), and 3 minutes   |
| <b>Status Indicators</b>        | Battery, temperature, TX/RX values  |
| <b>Battery</b>                  | 3 x AAA Lithium, 6+ years of battery life with normal usage.  |
| <b>Installation Environment</b> | Indoor  |
| <b>Firmware Upgrade</b>         | Remotely over the air, via BlueEye  |
| <b>Operating Temperature</b>    | -20°C to +40°C (-4°F to 104°F)  |
| <b>Auto Learn</b>               | Yes   |
| <b>Colors</b>                   | White   |
| <b>Dimensions</b>               | 6.6W x 12.4H x 6.1D cm (2.6" W x 4.9" H x 2.4" D)   |
| <b>Weight</b>                   | 0.16 kg   |
| <b>Certification</b>            | CE, EN 50131-2-2, EN 50131-6, EN 50131-5-3,<br>FCC 15.247, Security Grade – 2, Environmental Class – II<br>Type of Power Supply – Type C<br>Certification Body: Aplica Test & Certification |

## FCC Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and the receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

**WARNING – RF EXPOSURE COMPLIANCE:** This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

**FCC ID:** KDYPMD75M

**IC:** 2438A-PMD75M

- This Class B digital apparatus complies with Canadian ICES-003.
- -Cet appareil numerique de la classe B est conforme a la norme NMB-003 du Canada.

## IC Statements

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**AVERTISSEMENT – CONFORMITÉ AUX NORMES D'EXPOSITION AUX RF:** Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

## Warranty

For complete warranty information on this product, see the [Limited Warranty Statement](#) document, or contact your local Paradox distributor.

## Patents

US, Canadian, and international patents may apply. Paradox is a trademark or registered trademark of Paradox Security Systems (Bahamas) Ltd.

© 2025 Paradox Security Systems (Bahamas) Ltd. All rights reserved.